

Product Information:



NX-5000 Mobile Remote Mount Assembling Instructions

1 Select Control Head




F KCH-20RM *Featured Control Head* OR **B** KCH-19M *Basic Control Head*

2 Select the number of Control Heads

Single (1) Control Head 	5F	5B
Dual (2) Control Heads 	5FF	5BB

3 Select the number of RF Decks

Single (1) Control Head		
Single (1) RF Deck 	5FM	5BM
Dual (2) RF Decks 	5FMM	5BMM
Triple (3) RF Decks 	5FMMM	5BMMM
Dual (2) Control Heads		
Single (1) RF Deck 	5FFM	5BBM
Dual (2) RF Decks 	5FFMM	5BBMM
Triple (3) RF Decks 	5FFMMM	5BBMMM

KENWOOD

PRODUCT

4 Select Speakers

Select "MR" for Multiple Speakers (KES-5) providing simultaneous monitoring capability. To simultaneously monitor receiving audios from multiple RF decks, external speakers have to be connected to the RF decks.

5 Order Labor Code (if Factory Assembly is required)

Note: MUST order required numbers of RF decks (NX-5x00B) separately.

For L-5031~5038, complete the enclosed "NX-5000 Remote Mount Configuration Request Form" and return to the Land Mobile Order Desk at the time of order processing. (The form is also available for download from Kenwood Tools – <http://tools.kenwoodusa.com>)

Single (1) Control Head	w/ KCH-20RM	w/ KCH-19M	Labor Code	Form Required
Single (1) RF Deck	5FM	5BM	L-5029	No
Dual (2) RF Decks	5FMM	5BMM	L-5031	Yes
Multiple Receive	5FMM-MR	5BMM-MR	L-5032	
Triple (3) RF Decks	5FMMM	5BMMM	L-5035	
Multiple Receive	5FMMM-MR	5BMMM-MR	L-5036	

Dual (2) Control Heads	w/ KCH-20RM	w/ KCH-19M	Labor Code	Form Required
Single (1) RF Deck	5FFM	5BBM	L-5030	No
Dual (2) RF Decks	5FFMM	5BBMM	L-5033	Yes
Multiple Receive	5FFMM-MR	5BBMM-MR	L-5034	
Triple (3) RF Decks	5FFMMM	5BBMMM	L-5037	
Multiple Receive	5FFMMM-MR	5BBMMM-MR	L-5038	

IMPORTANT NOTE:

For RF Decks prior to S/N: B5900000, KWD-5004MR Radio Feature License Key MUST be ordered and authenticated.

